


Fronius Australia

To complete the system commissioning successfully, you **must** complete the following **two** steps in the **Solarweb** platform:

Step 1


Tick the check box to allow remote control through Solarweb (Navigate to Settings > DNO Editor).

If the **“Allow Remote Control through Solarweb”** is not available or does not appear then an update is required. (Navigate to Services > Firmware update)

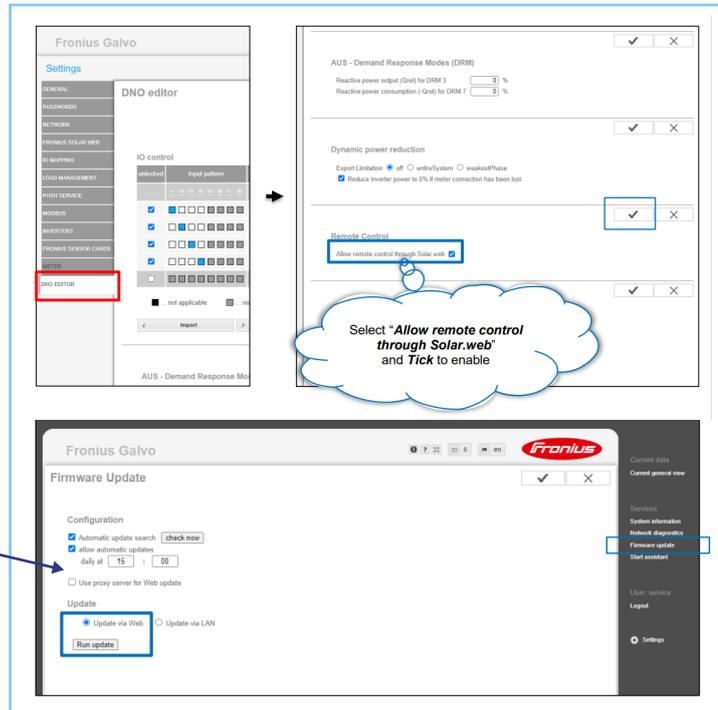

Step 2

Enter the **NMI** (National Metering Identifier) into the PV System profile.

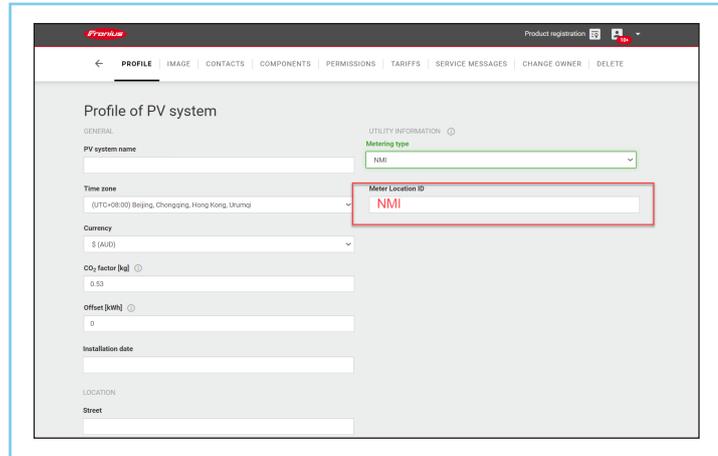

Top Tips

- The firmware required for Step 2 must be at a minimum version > **3.20.6-1**
- To connect to the inverter Wi-Fi Access Point, use the IP Address **192.168.250.181**
- The update may take up to 15-20 minutes depending on the internet connection available.
- Ensure that the correct grid code for Australia Region B (AS/NZS 4777.2:2020) is selected during the commissioning process.

